

**INSTRUCTIONS
FOR UPDATING
your Media System
Touch/Color**





INSTRUCTIONS FOR UPDATING YOUR MEDIA SYSTEM TOUCH/COLOR

SEAT offers you available software updates every six months.


Periodically check your radio/navigator software and, if a new software version exists, do the following steps to update it:

- 1 - Download the software update file.
(www.seat.XX/XX).
- 2 - Use an SD, USB or CD device to extract and copy the file's contents.
Warning: the device must be completely empty.
- 3 - Insert the SD, USB or CD device, with the data copied onto it, into your radio/navigator.
- 4 - After inserting the device into your radio/navigator, follow the next steps on your Media System Touch/Color console:
 - 1 · Select the "Setup" option from the "Menu"
 - 2 · Once you are in "Setup", select the "System Information" option
 - 3 · Select "Software update" from the drop-down menu


1



2

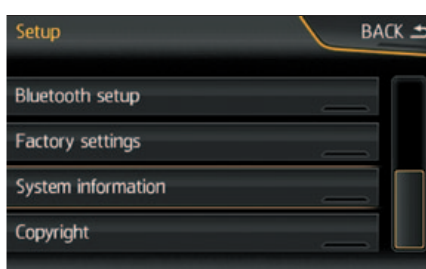

3

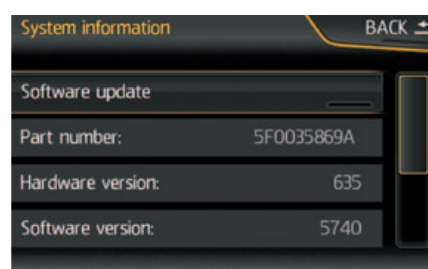


A/C

- 4 · If the content of the inserted device is correct, the following screen will be displayed:




Install update. Press “Next”.



- 5 · If the content of the device is not correct, or there has been an error when copying the data, the following message will be displayed:

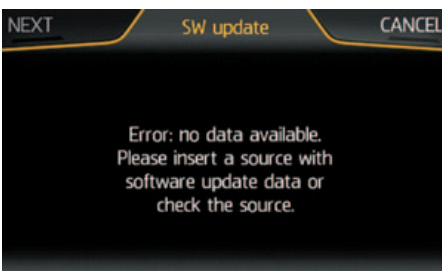

If the installation process has been executed properly, the following message will be displayed:

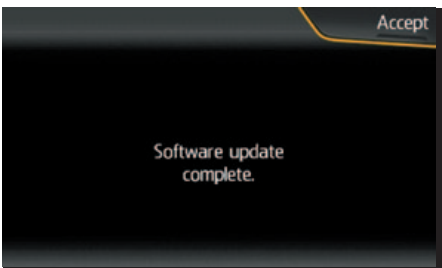

If any problem occurs, the system will display the following error message:

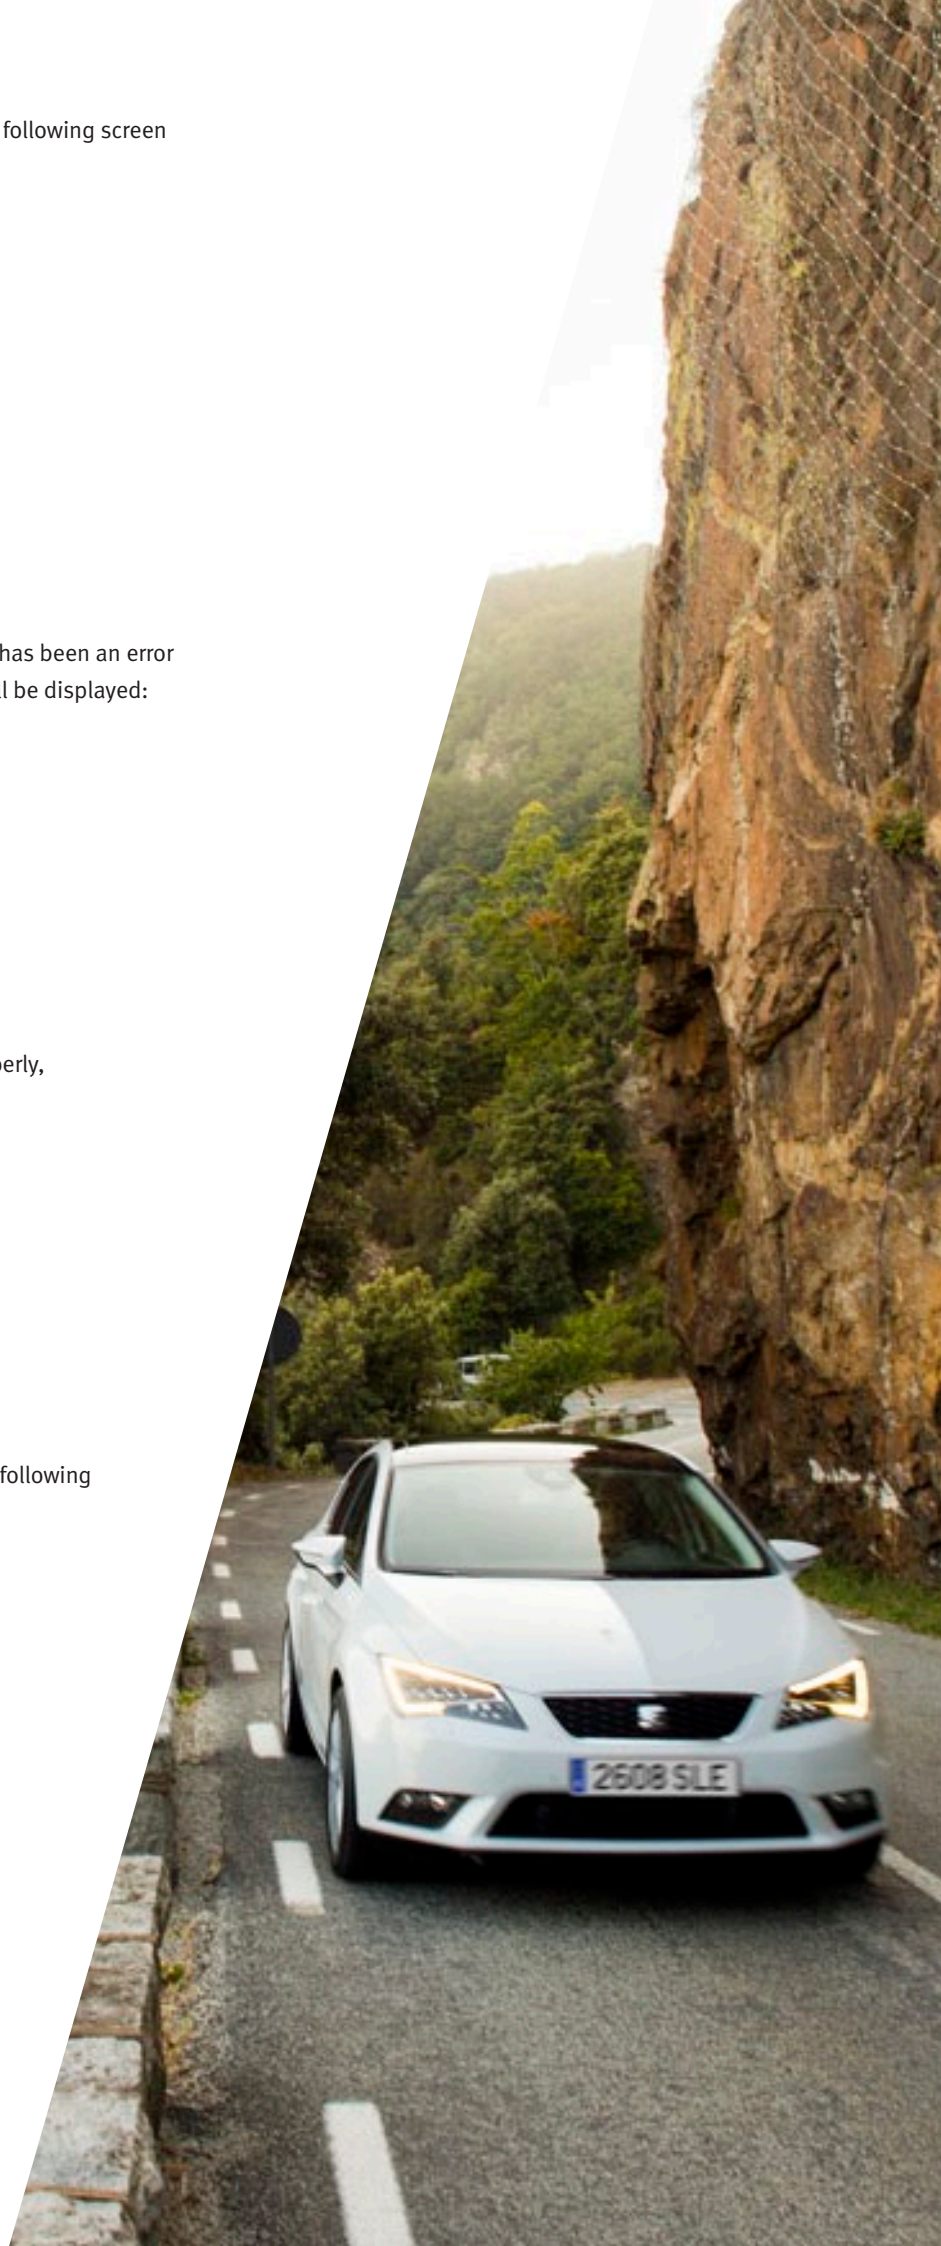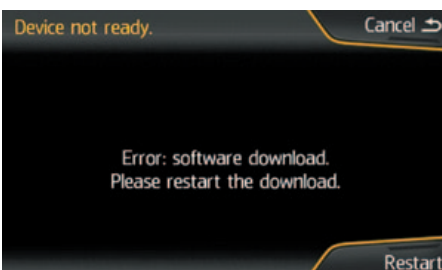

We are Spanish and German. We are passionate perfectionists. We are emotional technologists. Everything we know, is everything you feel. We give design a purpose. We bring technology to life. We call it ENJOYNEERING. We are SEAT.

